Crosby

IPBCNS



For the lifting and transfer of wide flange beam sections and plate girders

- When lifting, these beam clamps grip the beam at three points, and when properly balanced and safely guided, the beam can be handled even if the clamp is slightly off center lengthwise.
- Capacities: 13.5 through 32 metric tons (higher Working Load Limits are available upon request).
- Eliminates the need for slings, chokers, and spreader bars.
- When applied to load, the tongs automatically open and slide under the flange of the beam.
- Center plate and gripping tongs work together the heavier the beam, the greater the clamping pressure.
- Base is recessed to accept studs welded to the beam surface.
- Welded alloy steel body for strength and smaller size. Forged alloy components, where required.
- Individually Proof Tested to 2 times the Working Load Limit with certification.
- Crosby IP logo, Working Load Limit and jaw opening permanently stamped on body.
- Each product is individually serialized, with the serial number and Proof Load test date stamped on body. User manual with test certificate is included with each clamp.
- Maintenance and repair kits are available.
- Temperature range -40 °F (-40 °C) to +212 °F (+100 °C)

Model IPBCNS






			Weight	Flange Grip Range (in)		Dimensions (in)						
Model No.	WLL (t)*	Stock No.	Each (lb)	Width (A)	Thickness (B)	С	D	E	F	G	K	Maintenance Kit Stock No.
IPBCNS	13.5	2702018	137	7 - 17	0.5 - 2	17.5	30.5 - 23.3	5.5	19.9 - 29.5	35.2 - 28.3	1.33	2729610
IPBCNS	22.5	2702036	291	16 - 24	1 - 3	23.5	39.8 - 32.0	6	30.5 - 38.1	44.9 - 38.7	1.75	2729610
IPBCNS	32	2702054	529	16 - 36	1.63 - 4	28.7	46.8 - 40.3	7	31.2 - 53.1	57.4 - 49.5	2.00	2729610

^{*}Design factor based on EN 13155 and ASME B30.20.

NOTE: Control the beam at all times. Beams should be gripped as near the center as possible. Snubbing lines at each end must be used to control excessive twisting or swinging, and to guide the beam to its proper place. Each lifting situation may have a specific demand which should be addressed before lifting.

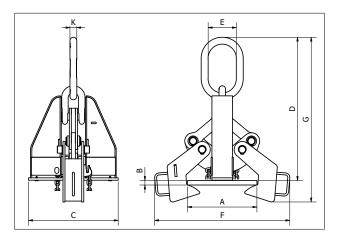

Stock No.	Base Dimensions (in)										
	С	L	M	N	Р	S	Т				
2702018	17.5	1.00	6.70	4.40	0.78	4.00	2.44				
2702036	23.5	1.30	7.48	6.70	1.19	6.00	3.62				
2702054	28.7	1.90	8.90	8.00	1.19	6.00	3.62				

