

User Manual

Grab Hook OG



Grab Hook OG Grade 10 | Grab Hook OG Grade 8
OG-10-10 | OG-10-8

Table of contents

1	Introduction and EC declaration	2
1.1	EC declaration of conformity	2
1.2	Abbreviations	2
2	Safety precautions.....	3
2.1	Warnings, cautions and notes.....	3
2.2	General safety precautions.....	3
2.3	Lifting precautions	3
3	General description.....	6
4	Intended use and restrictions	7
4.1	Intended use	7
4.2	General limitations of use.....	7
4.3	Use in exceptionally hazardous conditions.....	7
4.4	WLL reduction at elevated temperatures.....	7
4.5	Fatigue	8
4.6	Additional marking.....	8
5	Instructions prior to use	9
5.1	Verification prior to first use.....	9
5.2	Inspection prior to each use	9
5.3	Before loading.....	9
6	Assembly	10
	Sling assembly example: shortening one chain leg with separate Coupling Link G.....	10
	Sling assembly example: shortening one chain leg with a common Coupling Link G.....	10
	Sling assembly example: where Grab Hook OG is used to make a single leg basket.....	12
6.1	Limitations	12
7	Maintenance	13
7.1	Inspection.....	13
7.2	Examination	13
7.3	Repair.....	13
7.4	End of use/Disposal	14

1 Introduction and EC declaration

This manual is an original instruction in accordance with:

Directive 2006/42/EC on machinery, section 1.7.4 Instructions and Annex II Declarations.

It also meets the requirements in:

Standard EN 1677-1:2000+A1:2008, Components for slings - Safety - Part 1: Forged steel components.

This manual is valid for the following products:

OG-7/8-10	OG-10-10	OG-13-10
OG-16-10	OG-20-10	OG-22-10
OG-26-10	OG-32-10	OG-7/8-8
OG-10-8	OG-13-8	OG-16-8

This manual is valid together with Gunnebo Industries' instruction for slings and lifting guide.

All manuals are continuously updated and are only valid in their latest version, which can be downloaded from www.kitocrosby.com.

1.1 EC declaration of conformity

The Engineering Manager is the authorized person to compile the technical file.

We declare that the lifting component described in this user manual fulfils all the relevant provisions of the Directive 2006/42/EC as a partly completed machine.

The main use of the product is to be incorporated as part of a CE-marked lifting assembly but must not be put into service until the final lifting assembly has been declared to be in conformity with the provisions of the Directive 2006/42/EC.

Our quality management system complies with ISO 9001:2015 and is certified by LRQA Sverige AB for and on behalf of Lloyd's Register Quality Assurance Limited (certificate identity number: 10140613).

Information about harmonized and national standards/technical specifications that apply, and the valid version of this user instruction are available at www.kitocrosby.com.

If the products are modified without approval from Gunnebo Industries, this declaration becomes invalid.

Växjö, January 2026

Fredrik Sandberg

Engineering Manager

1.2 Abbreviations

EC	European Commission
LRQA	Lloyd's Register Quality Assurance
WLL	Working Load Limit

Table 1: Abbreviations

2 Safety precautions

2.1 Warnings, cautions and notes

Carefully read the instructions before using the lifting equipment.

The following signs are used in the instructions, to alert about potential dangers and safety related issues.



Warning!

A warning alerts about a situation which, if not avoided, could result in injury, or death.



Caution!

A caution alerts about a situation which, if not avoided, could result in minor or moderate injury, or damage to the equipment or other property.



Note!

Notes are added to give more information.

2.2 General safety precautions

The rigger is responsible for the lifting operation, and for following all related safety regulations.

The rigger is a competent person, with the knowledge to select correctly dimensioned lifting equipment, and to ensure its safe condition.

Before each lifting operation, check that the lifting system parts and connecting parts are correctly attached to each other.



2.3 Lifting precautions



Warning!

Visual function check:

Use the Grab Hook in combination with the lifting chain to check that the chain is correctly engaged. This means that the chain link is resting horizontally at the bottom of the chain slot in the Grab Hook OG.

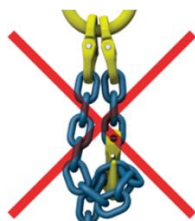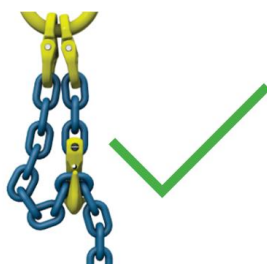


Warning!

Do not lift an object only with the tip of the hook, or with any object inserted in the chain slot other than a short link lifting chain.



Warning!

Check that the chain connected to the load is not twisted.

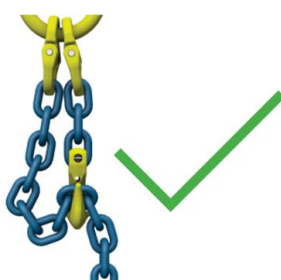


**Warning!**

Side loading is not allowed on any lifting components. Side loading can cause the load to swing or cause the equipment to fail.

**Note!**

When lifting asymmetric loads be aware of sudden movement of the load. Keep distance.

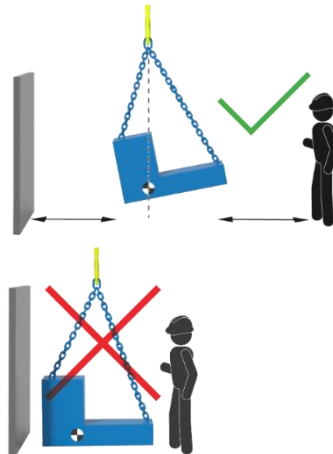

3 General description

All measurements shown in images, and technical data can be found on the website www.kitocrosby.com.

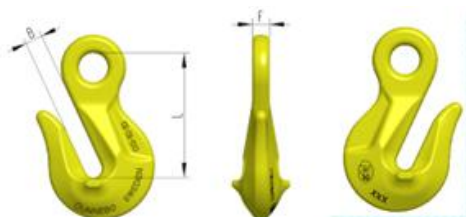


Figure 1: OG-10-10

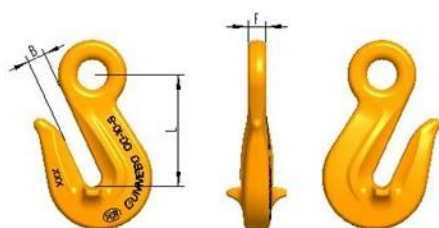


Figure 2: OG-10-8

Each Grab Hook OG is marked as follows:

- Manufacturer identification (GUNNEBO SWEDEN)
- Product name, size, material grade (8 or 10)
- Batch/traceability code
The traceability code consists of letters and numbers that identify which plant the product was made in, the year and the batch. This enables tracing the product back through the manufacturing process, all the way back to the specific raw material.
- German professional worker association (BG H32)

Gunnebo Industries issue:

- manufacturer's certificate according to EN 1677-1 and
- 3.1 material certificate acc. to EN 10204

The following standards apply for Grab Hook OG Grade 8:

- EN 1677
- ISO 8539:2009
- ASTM A952/A952M
- AS 3776:2015
- SANS 1595:2003

The following standards apply for Grab Hook OG Grade 10:

- EN 1677
- ASTM A952/A952M
- AS 3776:2015

WLL refers to the maximum working load a lifting accessory or lifting assembly can be subjected to.

Authorized resellers may provide their own documentation and will be able to provide the original certificates upon request.

4 Intended use and restrictions

4.1 Intended use

The Grab Hook OG can only be used for lifting when the user has a valid certificate. Authorized resellers may provide their own documentation and will be able to provide the original certificates upon request.

- The Grab Hook OG is intended to shorten chain lifting slings. Asymmetric loads can require different leg lengths.
- The Grab Hook OG can also be used as an end component to hook back to the lifting chain leg to make a basket lift.
- It is not recommended to use the Grab Hook OG for lashing.
- Attach only Gunnebo short link chain of corresponding size and grade to the Grab Hook.
- Attach only Gunnebo Coupling link G of corresponding size and grade at the top eye of the Grab Hook OG.

4.2 General limitations of use

- Never modify, repair, or reshape the product by welding, heating or bending as this will affect the nominal WLL.
- Do not heat-treat the product as this may affect the WLL.
- Do not galvanize or subject the product to any plating or coating process without approval of the manufacturer.
- Do not use the product in alkaline or acidic conditions.
- Do not expose the product to aggressive chemicals, such as acids, alkalines and their vapors.

4.3 Use in exceptionally hazardous conditions

The rating of lifting accessories in European Standards assumes the absence of exceptionally hazardous conditions.

Exceptionally hazardous conditions include offshore activities, the lifting of persons, and lifting of potentially dangerous loads such as molten metals, corrosive materials, or fissile materials.

In such cases a competent person should assess the degree of hazard and adjust the working load limit accordingly.

4.4 WLL reduction at elevated temperatures

The general service temperature is -40 °C/-40 °F to +200 °C/392 °F.

For temperatures higher than +200° C/392 °F, the following apply:

Service temperature	New load capacity in % of original WLL
200-300 °C 392-572 °F	90%
300-400 °C 572-752 °F	75%
> 400 °C > 752 °F	Not allowed

Table 2: WLL reduction at elevated temperatures

4.5 Fatigue

It is important to understand that fatigue failure can occur even if the prescribed WLL is not exceeded.

Scenarios in which the Grab Hook OG is subjected to variable load over a prolonged period of time, will carry the risk of fatigue. Consider this when dimensioning and deciding service intervals.

The Grab Hook OG are designed for a maximum of 20 000 load cycles.

4.6 Additional marking

If markings such as project code, and serial number are added, it must be done in a way that does not reduce the strength, corrosion resistance, or the legibility of the manufacturer's own marking.

The following methods are recommended for marking:

- marking tape
- engraving tool
- low stress punches



Figure 3: Recommended areas for punched or engraved marking

5 Instructions prior to use

Read and understand this manual before using the Grab Hook OG. Read the [Safety precautions](#).

For further recommendations regarding safe use of the Grab Hook OG in sling applications, see Gunnebo Industries' instruction for safe use of slings and lifting guide. Download the Lifting guide and Instructions for sling at www.kitocrosby.com.

5.1 Verification prior to first use

Before first use ensure that:

- The Grab Hook OG is precisely as ordered.
- The manufacturer's certificate is in order.

5.2 Inspection prior to each use

Inspect the Grab Hook OG for obvious damage or deterioration before each use in accordance with local regulations.

Check also against the items listed under [Inspection](#). If there is any doubt regarding meeting these criteria, do not use the product for lifting operation.

5.3 Before loading

- Determine the weight of the load and the center of gravity.
- Check the conformity of the load with the WLL of the lifting equipment for the specific working configuration.
- Ensure that the Grab Hook OG has been correctly assembled in accordance with the [Assembly](#) instructions.
- Ensure that no obstacles obstruct the lift and prepare the landing site.

6 Assembly

Only a qualified person may assemble the Grab Hook OG.

When the Grab Hook OG is incorporated as part of a sling, it must be part of the certification and WLL rating of the complete sling.

Sling assembly example: shortening one chain leg with separate Coupling Link G

- Attach the top eye of the Grab Hook OG to its own Coupling Link G. The chain is not connected to this Coupling Link.

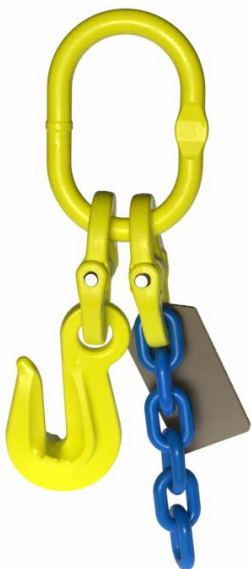


Figure 4: Shortening one chain leg with separate Coupling Link G

Sling assembly example: shortening one chain leg with a common Coupling Link G

- Attach both the Grab Hook OG and the chain to the same Coupling Link G.



Figure 5: Shortening one chain leg with common Coupling Link G

If both chain and Grab Hook OG are assembled in one G-link, do the following:

-
- | | |
|---|---|
| 1 | Insert the Grab Hook OG into the Coupling Link G. |
|---|---|



-
- | | |
|---|--|
| 2 | Insert the end link of the chain into the Coupling Link G. |
|---|--|



Note!

It is essential to assemble the components in the correct order. Insert the Grab Hook OG first, followed by the end link of the chain, as the image shows.



Sling assembly example: where Grab Hook OG is used to make a single leg basket

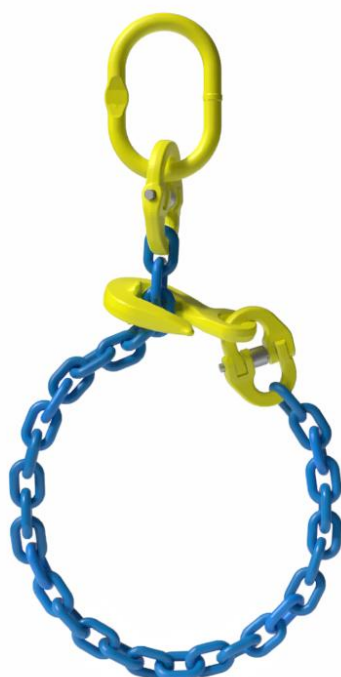


Figure 6: Grab Hook OG is used to make a single leg basket

- Verify that correct chain and Coupling Link G are assembled. For example:
For Grab Hook OG 10-10 use chain KLA-10-10 and Coupling Link G-10-10.
For Grab Hook 10-8 use chain type KLB/KLU/KLZ-10-8 and Coupling Link G-10-8.
- Verify that all markings are readable on the Grab Hook OG.

6.1 Limitations

Verify that the correct chain and Coupling Link G are assembled based on the same grade and size. Do not use any other connecting part other than the G-link. For example:

- For Grab Hook OG 10-10 use Coupling Link G-10-10.
- For Grab Hook OG 10-8 use Coupling Link G-10-8.

7 Maintenance

When performing maintenance or inspection, always read and follow the [Safety Precautions](#).

7.1 Inspection

During service, lifting equipment are subjected to conditions which affect their safety. Therefore ensure that the equipment is safe for continued use. See [Safety precautions](#).

Withdraw the Grab Hook OG from service and refer the product to a competent person for thorough examination if any of the following is observed:

- The Grab Hook OG markings are illegible.
- More than 10% reduction of dimension at any point.
- Cuts, nicks, gouges, cracks, excessive pitting or corrosion, heat discoloration, bends, distortion, or other defects.
- Only use the Grab Hook OG if the chain slot is parallel.



Figure 7: Parallel chain slot

7.2 Examination

A competent person should thoroughly examine the product at least once every year. The inspection should be carried out more frequently if deemed necessary, taking into consideration the following points.

- Local, national, or branch-specific regulation.
- The service condition of the Grab Hook OG.
- Use in demanding environments (such as corrosive or extreme temperature).
- Use where the Grab Hook OG is subjected to repeated loads that may induce metal fatigue.

Maintain records of examinations. Before examination, clean the product so it is free from oil, dirt, and rust.

Any cleaning method which does not damage the parent metal is acceptable. Methods to avoid are those using acids, overheating, removal of metal or movement of metal which may cover cracks or surface defects.

See also [Safety Precautions](#).

7.3 Repair

A competent person with relevant knowledge and technical skills must do the repairs. The product shall only be returned to service after approval by a designated person.

Maintain records of repairs.

Any replacement component or part of the Grab Hook OG should be in accordance with the appropriate European Standard for that component or part. Use only original Gunnebo spare parts.

Discard or replace components that are cracked, visibly distorted or twisted, severely corroded or have deposits which cannot be removed.

Remove minor damage such as nicks and gouges by careful grinding or filing. The surface should blend smoothly into the adjacent material without abrupt change in the section. The complete removal of the damage should not reduce the thickness of the section at that point to lesser than the manufacturer's specified minimum dimensions or by more than 10% of nominal thickness of the section.

7.4 End of use/Disposal

Recycle as general steel scrap.